

the Ministry of Defense grants the permit, it shall notify the General Direction of Civil Aeronautics, if it appears to be convenient for reasons of flight safety.

Article 112. A provisional flight permit shall be granted to owners of foreign aircraft that visit the country on tourist trips, in accordance with the respective regulation, and they must submit the notification specified in Article 111.

FIFTH SECTION. INTERNATIONAL AIR TRANSPORTATION

Article 113. In addition to compliance with the provisions of this law, the certificates that the Government issues for the operation of international air transportation services shall be in accordance with the treaties or agreements of civil aviation that have been signed and ratified by the Government of Honduras.

Article 114. In order to determine an international air route, it shall be sufficient to specify the airports of entrance and departure within Honduran territory, as well as the point or points that will be touched by the aircraft in a foreign State before landing on and after taking off from national territory. With relation to international main routes, the Ministry of Development may demand that the route be described from terminal to terminal and by intermediary stops.

Article 115. Any foreign aircraft whose owner or operator desires to fly in transit over Honduran territory or land thereon without taking on or unloading passengers, cargo or mail, must:

- a) Notify the General Direction of Civil Aeronautics in conformity with Article 111;
- b) Comply with the safety requirements established by this law and the regulations issued thereunder as well as the legal provisions of his country with respect to nationality and registration marks, safety equipment and accessories and have a certificate of airworthiness and licenses of the flight personnel and other pertinent documents; and,
- c) Comply with the legal provisions of the Republic on customs, immigration and health.

Article 116. Owners of Honduran civil aircraft who desire to take them abroad, either temporarily or for exportation purposes, must obtain a permission from the Ministry of Development.

Article 117. The entrance into, and departure of aircraft from the country must be made at the airports designated by the General Direction of Civil Aeronautics.

Article 118. Foreign international air carriers that operate in Honduras must have a representative permanently stationed in the country, with sufficient power to appear before the administrative and judicial authorities for the purpose of answering any demand or claim that may be made for acts related to air transportation.

Article 119. When an aircraft coming from abroad lands in Honduran territory, the commander of the aircraft or the agent of the same shall immediately present the following documents to the authorities:

- a. List of the crew;
- b. List of passengers and their personal baggage;
- c. Cargo manifest;