

**Section 66.** For the execution of this Act, the competent official shall have the power:

(1) to enter any premises of the licensed aerodrome, the temporary place for take-off and landing of aircraft or the place on which the air navigation facilities are established;

(2) to enter, during working hours, any works or premises in which aircraft or parts thereof are being manufactured, assembled, repaired, or are being inspected and overhauled, and to inspect and examine such work as well as parts thereof, and the drawings relating thereto;

(3) to get on board, inspect and search any aircraft which, he has reason to believe, contains prohibited goods or goods which are restricted under this Act or any other laws, or goods which have been imported into, or are being exported out of, the Kingdom as evading customs duties;

(4) to inspect any aircraft already provided with certificate of airworthiness, from time to time as he may deem fit;

(5) to enter and inspect any place where aircraft is stored;

(6) to seize prohibited goods or goods which are restricted under this Act or any other laws, or goods which have been imported into, or are being exported out of, the Kingdom as evading customs duties.

**Section 67.** When there is violation of the provisions of this Act relating to any aircraft, the competent official shall have the power to delay the departure of the aircraft.

## CHAPTER 9

### Penalties

**Section 68.** Whoever violates Section 16 or Section 62 shall be punished with fine not exceeding four thousand baht or imprisonment not exceeding six months, or both.

**Section 69.** Whoever, being the person in charge of an aircraft, violates Section 17, Section 18 or Section 19 shall be punished with fine not exceeding two thousand baht or imprisonment not exceeding three months, or both.