

T.O. 11L1-3-21-1/NAVWEPS 11-75A-39

TABLE OF CONTENTS

SECTION		Page
I	INTRODUCTION AND DESCRIPTION	1
	1-1 Introduction	1
	1-2 Description	1
	1-3 General	1
	1-4 Configuration "A"	1
	1-5 Configuration "B"	2
	1-6 Center Section	2
	1-7 Fairings	2
	1-8 Intervalometer	3
	1-9 Grounding Button	3
	1-10 Operation	4
II	OPERATION INSTRUCTIONS	6
	2-1 Preparation for Use	6
	2-7 Installation (Bomb Racks 15B, 15C, 15C-1)	8
	2-14 Loading	9
	2-21 Pre-Flight	10
	2-23 Post-Flight	10
	2-25 Storage	11
	2-27 Disposal	11
III	OPERATING CHECKS AND ADJUSTMENTS	11
IV	EMERGENCY OPERATION AND REPAIR	11

LIST OF ILLUSTRATIONS**Figure**

- 1-1 Rocket Launcher, LAU-3/A
- 1-2 Rocket Launcher, LAU-3/A Characteristics
- 1-3 Configuration "A", Standard Shipping Arrangement
- 1-4 Fairing Separation
- 1-5 Fairing Container
- 1-6 Fairing Sets Crated for Shipment
- 1-7 Intervalometer
- 1-8 Grounding Button
- 1-9 Firing Circuit
- 1-10 Launcher Electrical System
- 2-1 Disassembly of Configuration "A".
- 2-2 Electrical System Checkout
- 2-3 Removal of Intervalometer
- 2-4 Intervalometer Finger Contacts — Exploded View
- 2-5 Installation of Striker Post Assembly
- 2-6 Installation of Jumper Cable Assembly (optional)
- 2-7 Loading Rockets
- 2-8 Launcher Pre-Flight Status
- 2-9 Rocket Release Tool