

T.O. 11L1-3-21-1/NAVWEPS 11-75A-39

SAFETY SUMMARY

The following WARNINGS are repeated from the text for the protection of personnel.

WARNING

- Under no circumstances perform any electrical tests with rockets in launcher. (Page 6)
- Aircraft armament switch must be in "OFF" position and Ground Button in unused launcher receptacle before rockets are loaded in launcher. (Page 9)
- Exercise all precautions applicable to high explosive ammunition when handling rockets. Do not stand directly in front or behind launcher while loading. (Page 9)
- Rockets must be properly orientated with arrow markings on FWD bulkhead of launcher before engagement with detent and must not be pushed past the detent stop. (Page 10)

The following major CAUTIONS are repeated from the text because if not strictly observed the effectiveness of the equipment or aircraft may be destroyed.

CAUTION

- Shipping end closures and fairing containers should not be opened or seals broken until ready for use. (Page 6)
- Launcher must not be used if more than two tubes have pronounced cracks or delaminations. Do not use any tube that is damaged. (Page 6)
- Intervalometer must be seated and locked securely in place. (Page 8)
- Rocket heads must be firmly attached to rocket motors before installing in launcher. The motor and head will be tightened with a torque of 55-60 ft. lbs. (Page 9)