1-10 OPERATION: When the armament switch in the aircraft is closed, electrical power is fouted to the launcher in the manner shown in Figure 1-9. Rockets are fired in pairs and in the order given in Figure 1-9, (1A, 1B; 2A, 2B; etc.) with the exception of the center tube rocket which is fired singly.

Aircraft power is supplied to the launcher through either of the FWD or AFT receptacles. Internal wiring of the launcher is schematically shown by Figure 1-10.

NOTE

Aircraft armament switch must be closed for at least 1/4 second for rockets to fire.

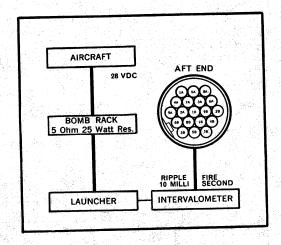


Figure 1-9. Firing Circuits