

SECTION II
Paragraphs 2-1 thru 2-6

T.O. 11L1-3-21-1/NAVWEPS 11-75A-39

OPERATION INSTRUCTIONS

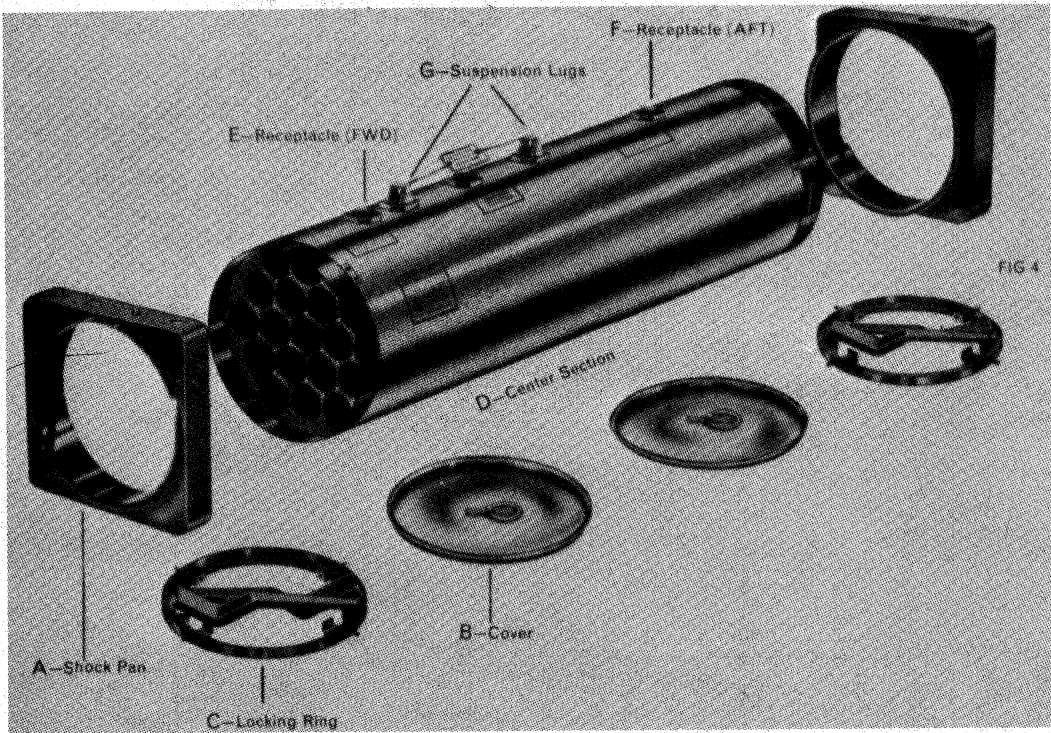


Figure 2-1. Disassembly of Configuration "A"

2-1 PREPARATION FOR USE

CAUTION

Shipping end closures and fairing containers should not be opened or seals broken until ready for use.

2-2. Disassemble watertight end seals from Configuration "A" (Figure 2-1) as follows:

- a. Remove Locking Ring by extending handles and turning counterclockwise.
- b. Lift Cover out of the shock pan.
- c. Lift spring latch on rear side of Shock Pan; turn Shock Pan counterclockwise to remove.

2-3. Inspect rocket tubes from each end of the launcher for any severe cracks or delaminations.

CAUTION

Launcher must not be used if more than two damaged tubes are found. Do not use any tube that is damaged.

2-4. Remove waterproof bag wired to suspension lugs. This bag contains Striker Post Assembly and Jumper Cable Assembly (Optional).

2-5. Remove Ground Button from FWD and AFT electrical receptacles.

2-6. Check out electrical system as follows: (Figure 2-2).

WARNING

Under no circumstances perform electrical tests with rockets in launcher.

- a. Remove intervalometer (Figure 2-3) by unfastening the hinge and key locking device and visually inspect to determine that all ten finger contacts are in open position supported by fuse wire (Figure 2-4). If any fuse wire is broken, the intervalometer must be replaced.