

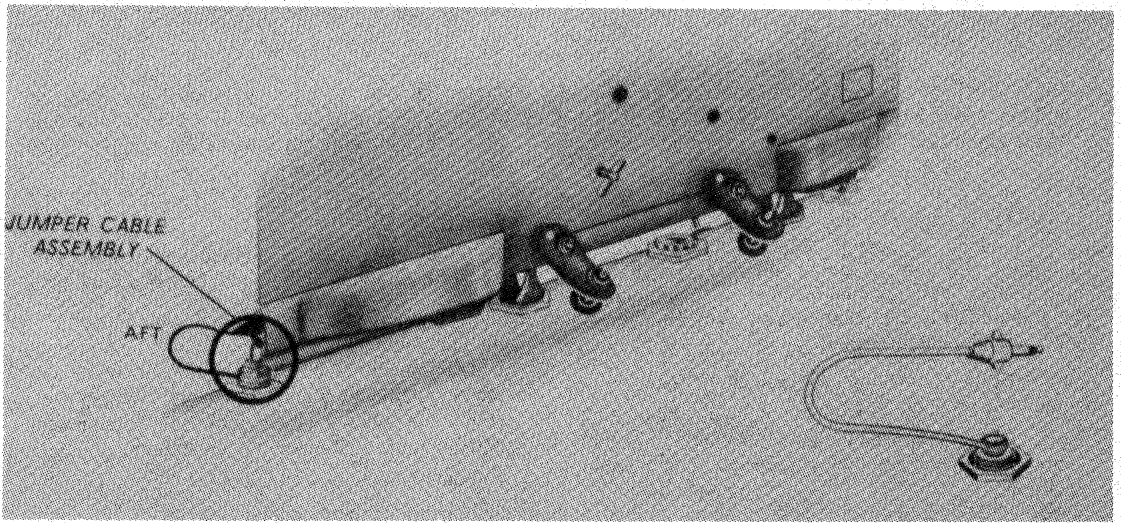


Figure 2-6. Installation of Jumper Cable Assembly (Optional)

- a-1. Jumper Cable Assembly (Figure 2-6)—Electrical connection is made by inserting cable jack in AFT receptacle of bomb rack until a positive connection is made.

2-14 LOADING.

WARNING

Aircraft armament switch must be in "OFF" position and Ground Button in unused launcher receptacle before rockets are loaded in launcher.

CAUTION

Rocket head must be firmly attached to rocket motors before installing in launcher. The motor and head will be tightened with a torque of 55-60 foot-pounds.

WARNING

Exercise all precautions applicable to high explosive ammunition when handling rockets. Do not stand directly in front or behind launcher while loading.

- 2-15 Ground rockets to forward edge of launcher and then remove fin protector.

- 2-16 Load rockets from forward end of launcher with rocket fins aligned so that arrow marking on launcher forward bulkhead is between two fins. (Figure 2-7).

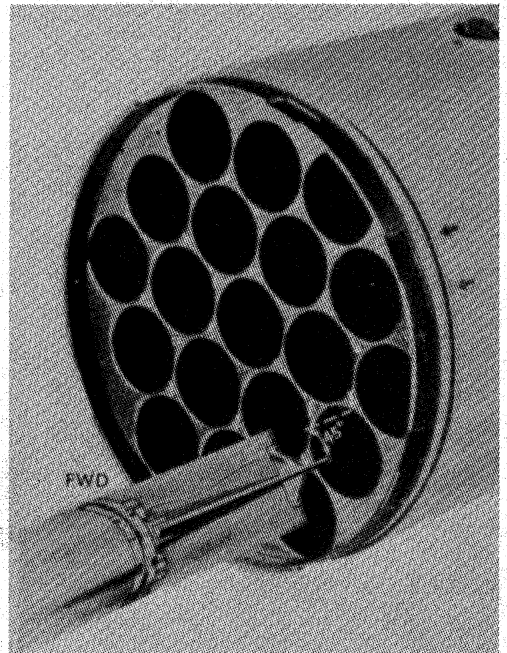


Figure 2-7. Loading Rockets